



RTX-71D-CHG

Dakota Digital RTX Instrument Installation
For 1971-74 Dodge Charger, B-body Mopar and GTX/Roadrunner

Your new RTX-71D-CHG kit includes:

RTX Display



Universal Sender Pack

Buzzer

Installation Manuals

Switch

Indicator Harness



(8) #8 x 1/2" Self-Tapping Screws

Main Harness

Control Box



(1) #10-32 x 1/2" Screw



(2) #10-32 Flange Nut




(1) #10-32 x 7/8" Screw




(2) #10 Lock Washer

Installation


1. Remove the stock gauge cluster from the dash. Retain all factory hardware for reassembly. Locations of hardware to remove are shown by the red arrows.

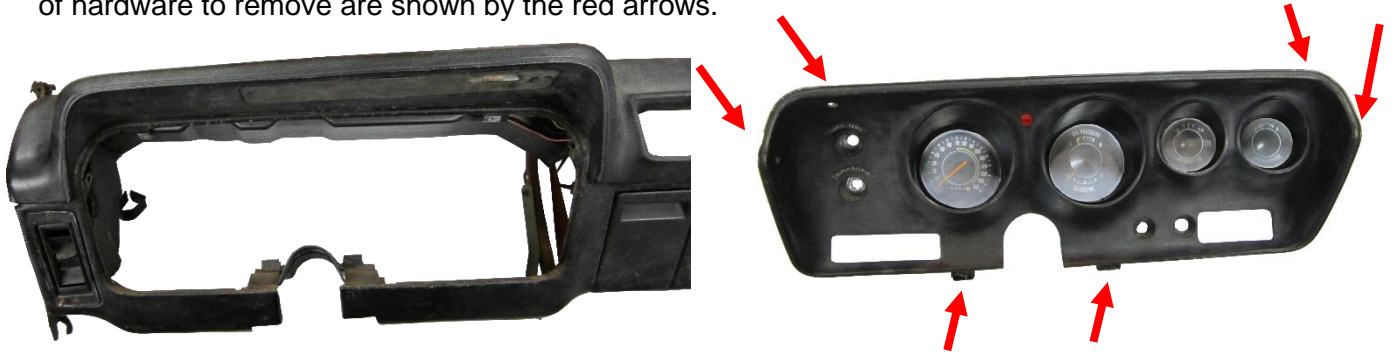


2. Remove the bezel from the stock gauge cluster by removing the eight (8) screws shown in blue arrows. Also remove and retain all gauge panel switches shown in red arrows. Switches will vary by vehicle options.

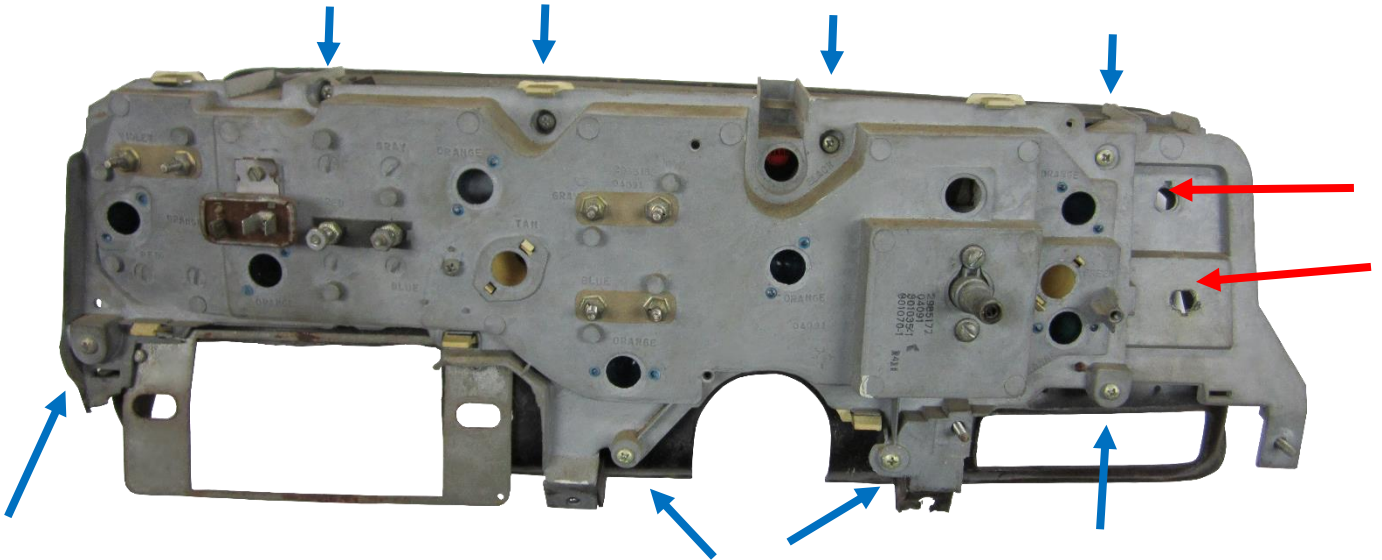


3. Remove the A/C heater control unit from its mounted location. Attach the included #10-32 screws to the A/C heater control unit. Viewing from the rear of the system, the 7/8" screw goes on the left side, and the 1/2" screw will go on the right. Secure these screws with the two included #10-32 flange nuts and #10 lock washers.

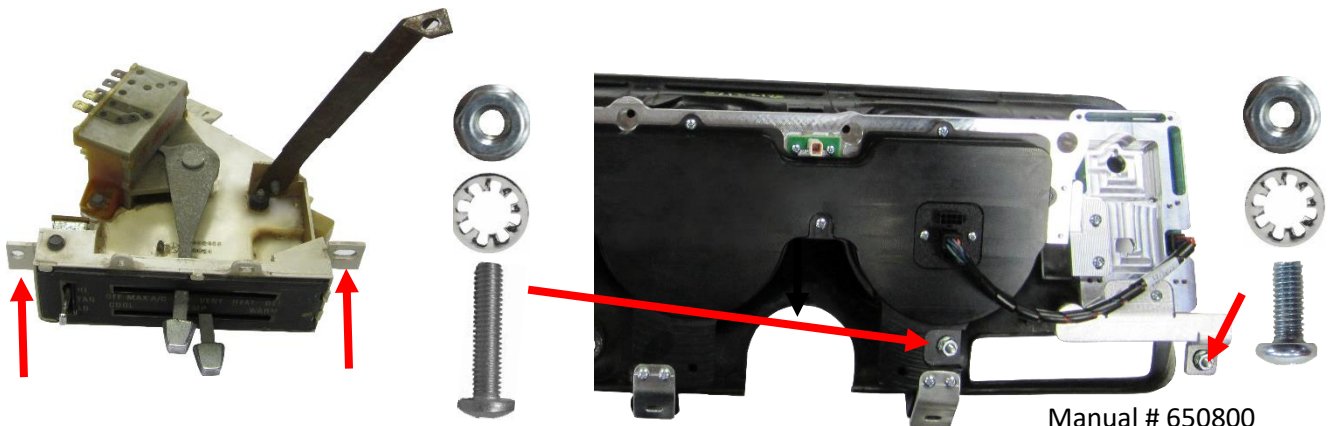


4. Attach the OEM light/wiper switches to the left side of the mounting plate on the RTX system. Switches may vary with vehicle.

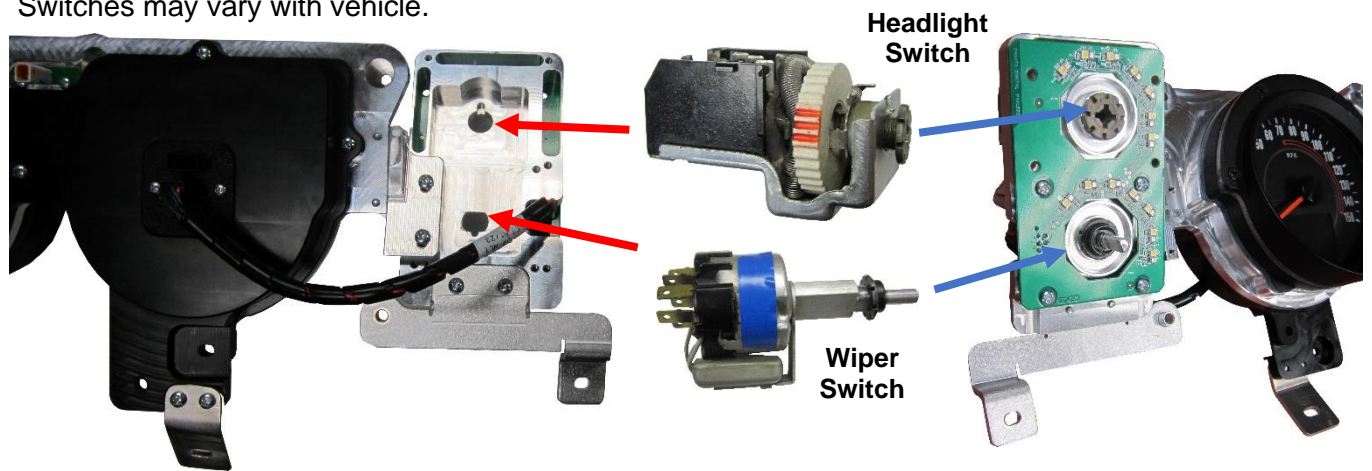


5. Attach the OEM bezel to the RTX system by using the provided 8x #8 x 1/2" self-tapping screws.

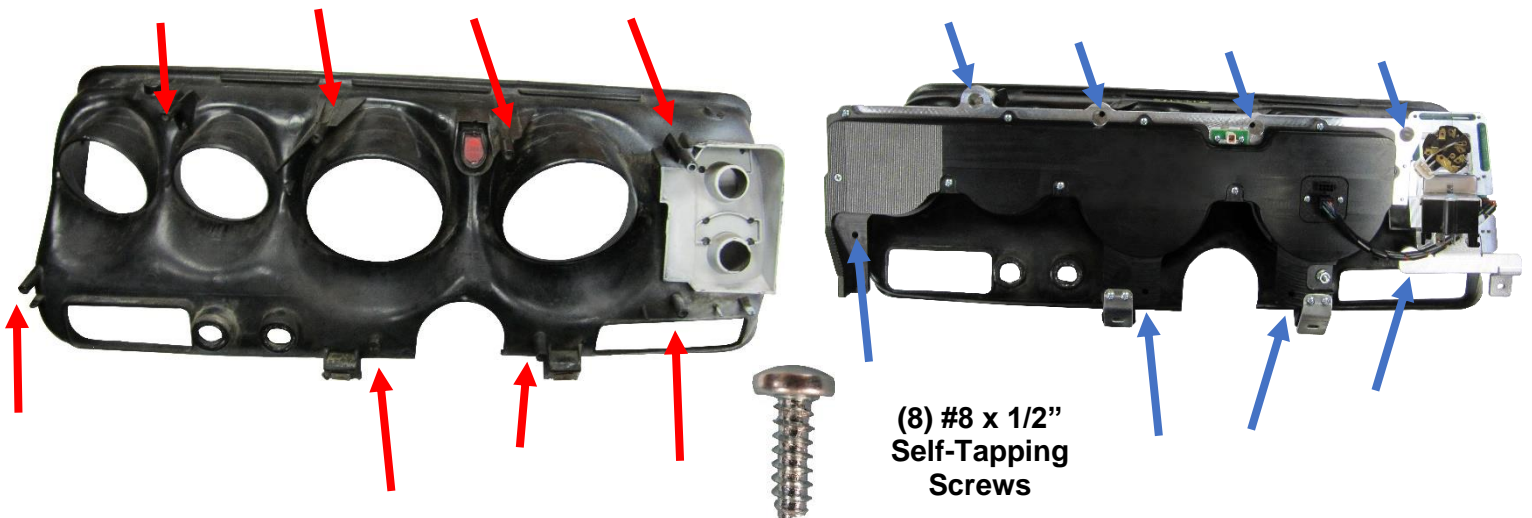


6. Connect the provided Main Harness and Buzzer (optional for audio feedback) to the back of the RTX system. Carefully route the other ends to the desired control box and buzzer mounting locations.

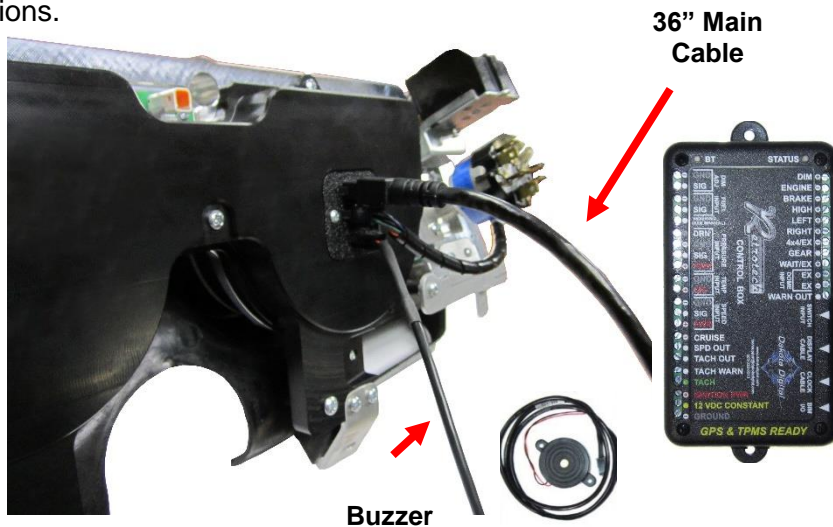


7. If the original parking brake indicator is desired, plug in the provided indicator harness in the OEM parking brake location. Do not wire this harness to the system's control box. The White/Green wire goes to the indicator circuit, and the White/Black wire goes to the chassis to ground.

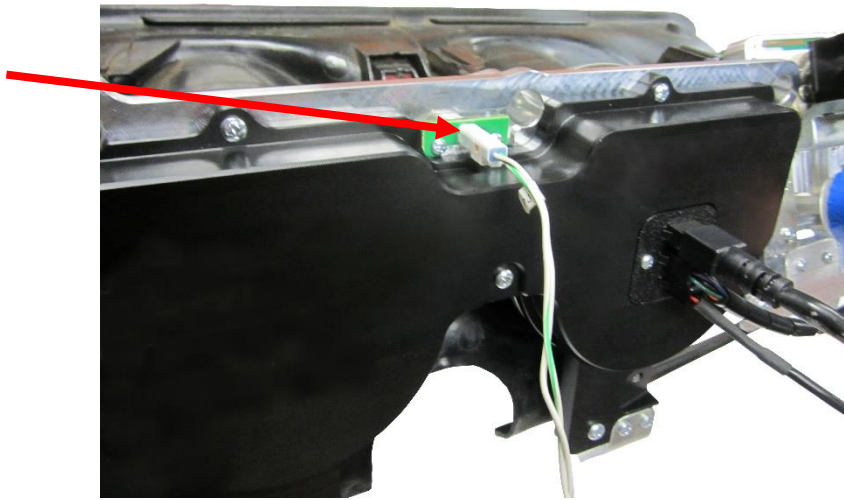

8. Using the six (6) original screws, Mount the RTX system with OEM bezel and switches to the vehicle's dash. The OEM bezel may need to be tightened or loosened for an optimal fit.

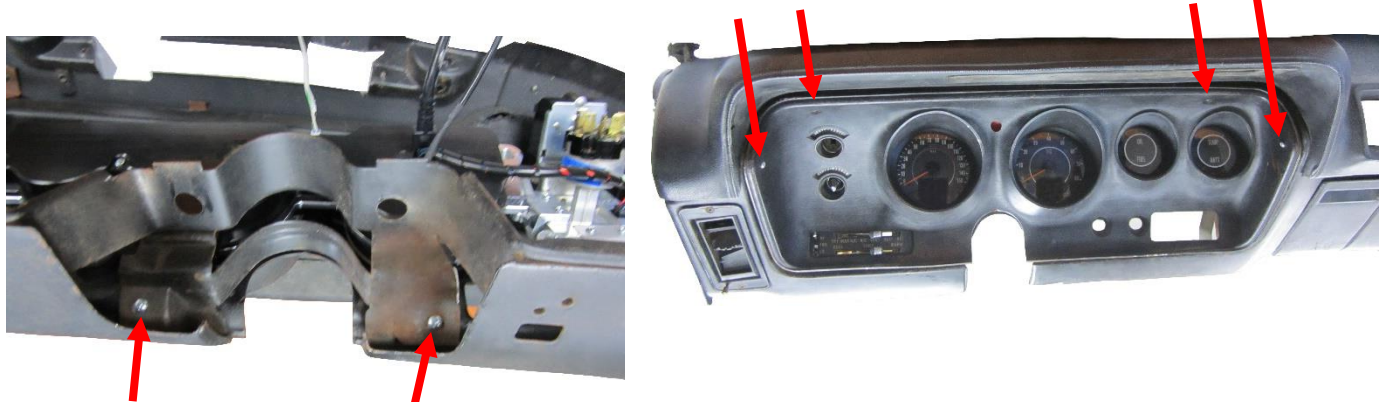

9. Install the A/C / heat controls using the previously fastened #10-32 x 7/8" screws in the provided mounting location.

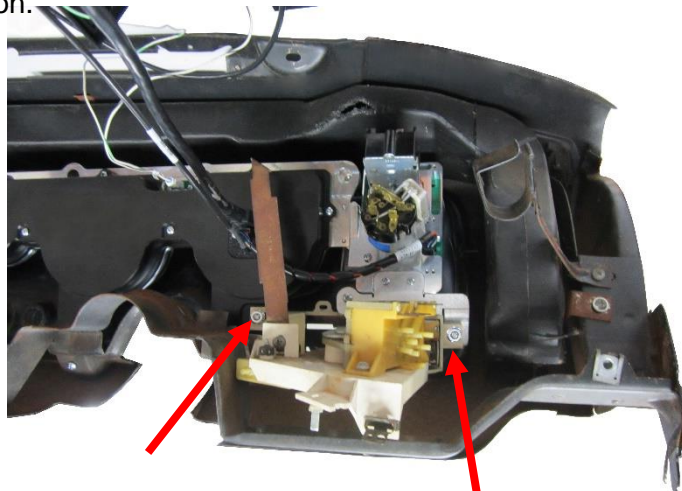

10. Refer to the main manual for wiring instructions to complete the RTX installation.



⚠ WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov



4510 W. 61st St. North
Sioux Falls, SD 57107
www.dakotadigital.com
dakotasupport@dakotadigital.com

Phone (605) 332-6513
Fax (605) 339-4106

© Copyright 2023 - Dakota Digital