

1970-72 Oldsmobile Cutlass Dakota Digital Gauge Installation


This sheet covers the installation of the Dakota Digital gauge kit into your 70-72 Oldsmobile Cutlass.

Removal of the dash from the car is not necessary for the gauge installation.

Remove the four screws holding the bezel in place. See arrows in photo for location.



Remove the original gauges and set aside

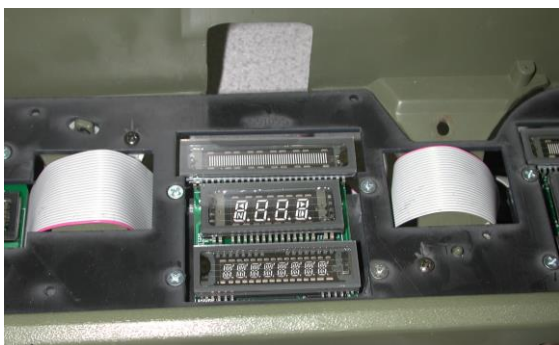

Place gauge subpanel display assembly into the dash.

Take care to route the ribbon cable as shown so it does not get pinched or damaged.

Hold the gauge display subpanel assembly in place using two of the provided screws in the two holes marked with arrows on the subpanel. Do not tighten them completely.

Clean the displays and the back of the lens if needed before placing the lens on top of the gauge display subpanel assembly. Using the remaining screws provided place the lens into the dash. Slowly tighten all screws alternating between them for even pressure. Be careful not to over tighten as you could strip the threads or damage the lens.

Reinstall the bezel using the original screws.

See the main instruction manual for the remainder of the installation.



⚠ WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov



4510 W. 61st St. North
Sioux Falls, SD 57107
www.dakotadigital.com
dakotasupport@dakotadigital.com

Phone (605) 332-6513
Fax (605) 339-4106

Copyright 2011 - Dakota Digital, Inc.