


VFD3-86J-WAG

Dakota Digital Mounting Detail
For 1986-'91 Jeep Grand Wagoneer
1986-'88 Jeep J-Trucks

1. Remove the stock gauge panel from the dash. Retain all hardware for reassembly.



2. Remove the clear lens on the front as well as the circuitry panel on the rear. Retain all hardware for reassembly.

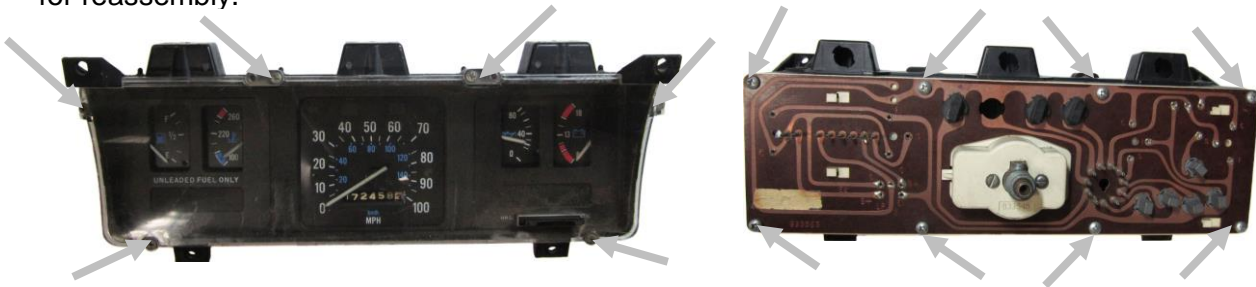

3. Now that the plastic housing is bare, make the six minor cuts as indicated in the following picture so the VFD3 displays will not be obstructed.




4. Spread a thin film of RTV silicone (not supplied) over the dashed line areas to hold the lens in place.



5. From the front, place the supplied lens of your preferred color into place and make sure that no RTV silicone squeezed into the windows viewing area.

12. Once the silicone is dry and the lens is secure, mount the VFD3 board over the back of the plastic housing using the hardware from disassembly. The factory clear lens is optional to re-use. Refer to the main manual to complete the VFD3 gauge system installation.

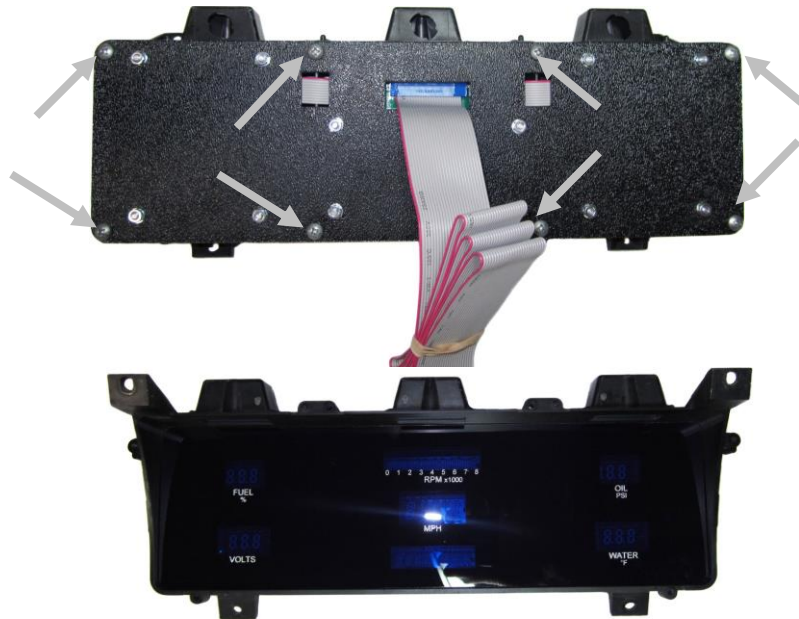

⚠WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov



4510 W. 61st St. North
Sioux Falls, SD 57107
www.dakotadigital.com

dakotasupport@dakotadigital.com Copyright 2011 - Dakota Digital, Inc.

Phone (605) 332-6513
Fax (605) 339-4106